

Safety Information

*Note: The following Safety and Assembly Instructions are generalized for 3-Wheeled Scooters.
They may not address all of the features of your model.*

PLEASE READ AND FULLY UNDERSTAND THESE INSTRUCTIONS BEFORE OPERATION



This symbol is important. It is the WARNING symbol. The warning symbol precedes safety instructions. Make sure the child understands these instructions. Failure to follow these instructions may result in injury to the rider or to others.



WARNINGS:

- Adult assembly is required.
- Adult supervision is required.
- An adult must assist children in the initial adjustment procedures to adjust handlebar and steering to height.
- Battery replacement must be performed by an adult.
- This product should only be used by persons 3 years and up. Maximum weight is 60 lbs (27kgs).
- Ensure the rider wears safety equipment such as helmet, knee pads, elbow pads and shoes.
- Do not allow a child to ride without an approved helmet, with the chinstrap securely fastened.
- Do not allow a child to ride without shoes.
- Do not allow a child to ride wearing anything that obstructs visibility or hearing.
- Do not allow a child to ride the product at dusk, at night or at times of limited visibility.
- Do not allow a child to ride on streets, roadways or alleys.
- Do not allow a child to ride on or near sloped driveways, hills, ditches, swimming pool areas, sand, gravel, dirt, leaves, or any other hazardous areas.
- Do not allow a child to ride near steps.
- For use on smooth paved surfaces only, away from motor vehicles.
- Avoid sharp bumps, drainage grates and sudden surface changes. Unit may suddenly stop.
- Never ride with more than one person.
- Watch out for pedestrians. Avoid excessive speed.
- Obey all local traffic and scooter riding laws and regulations.
- Check the product before each ride to determine if any potentially hazardous parts or conditions have developed.
- Replace worn or broken parts immediately.
- Be sure the rider keeps both hands on the handlebar for proper control.
- Handlebar hand grip or tube end plugs should be replaced if damaged as bare tubes have been known to cause injury. All products with capped handlebar ends should be checked regularly to ensure that adequate protection for the ends of the handlebars are in place.
- Replacement forks must have the same rake and tube inner diameter as the original product.
- THIS PRODUCT DOES NOT HAVE A BRAKE.

IF YOU HAVE ANY QUESTIONS REGARDING THE OPERATION OF THIS PRODUCT, PLEASE REFER TO THIS OWNERS MANUAL OR CALL CUSTOMER SERVICE.

Tools Required for Assembly

Small Adjustable Wrench / Hammer / Torque Wrench (recommended)

Assembly Instructions



WARNING: An adult must assemble this product. Keep small loose parts and plastic bags out of the reach of children.

Please refer to the Assembly Drawing while following these instructions:

Front Handlebar / Fork Assembly:

- Place a washer onto the fork stem.
- Insert the fork stem through the headtube and headtube bushings on the frame from bottom to top.
- Orient the slot in the top fork stem toward the rear of the unit.
- Place a washer, then the clamp assembly onto the handlebar tube with the open end of the clamp in-line with the slot in the fork stem.
- Slide the basket (if equipped) and then the clamp cover as far up the handlebar tube as possible.
- Insert the handlebar tube into the fork stem.

Front Handlebar / Fork Assembly (cont):

Note: Ensure that the minimum insertion mark on the handlebar tube is not visible - below the top of the fork stem.

- Align the handlebar so that they are perpendicular with the front wheel.
- Secure the handlebar in the steerer tube by tightening the clamp bolt recommended torque is (17 – 26Nm).
- Check that the clamp is tight enough so that the handlebar will not rotate inside of the steerer tube.
- Slide the clamp cover over the clamp.
- Secure the basket (if equipped) using the bracket and hardware provided.
- Install the accessories (bell, pad, streamers – if equipped) onto the handlebar.

Light Bars & Batteries


(If Equipped)

Light Bars:

- The light bars have motion sensors on them; they will light when the unit is in use, and stop after the unit is still.
- Put the switch in the ON position (on the underside of the unit) to activate the light bars.

Note: Some models do not have switches.

On these models, initial activation of the light bar is through removing the battery protection pull-tab.

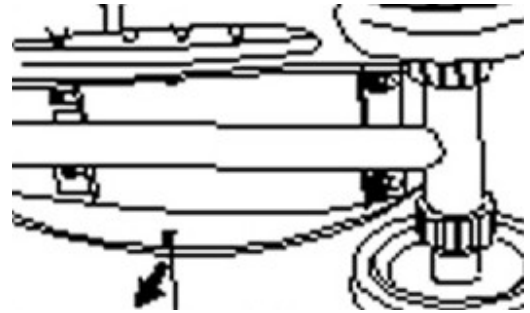

Battery: DC 3V, AG13 (included). Each light bar has 2 batteries.

Battery replacement:

- Remove the screws from the light bar cover - remove the cover.
- Remove the batteries from the circuit board.
- Install new batteries with the + side facing you.
- Check the operation by moving the scooter to activate the motion sensor.
- Replace the light bar covers & secure them with the screws.

Notes:

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the unit.
- Exhausted batteries are to be disposed of properly (check local laws).
- Keep the circuit board from getting wet.
- The supply terminals are not to be short-circuited.



WARNING: Dispose of batteries properly. Do not dispose of batteries in fire, batteries may explode or leak. Check local regulations for proper battery disposal.

Maintenance

Periodically check all fasteners tighten any that are loose, replace any that are damaged. This unit requires no lubrication. Keep the product clean and free of dirt, dust and water. This will prolong the useful life of the product.

Warranty

All components (except the LED and batteries) are warranted against manufacturing defects for six (6) months from the date of purchase. LEDs have a one (1) month warranty. Batteries are not warranted.

Assembly Drawing

